


LAPTOP TRAY CART ATTACHMENT QUICK REFERENCE GUIDE

Complete the following steps to assemble a laptop tray cart attachment.



1. Secure the cart mount arm to the cart using the two brackets and four nuts and bolts provided. You can attach the arm to either end.

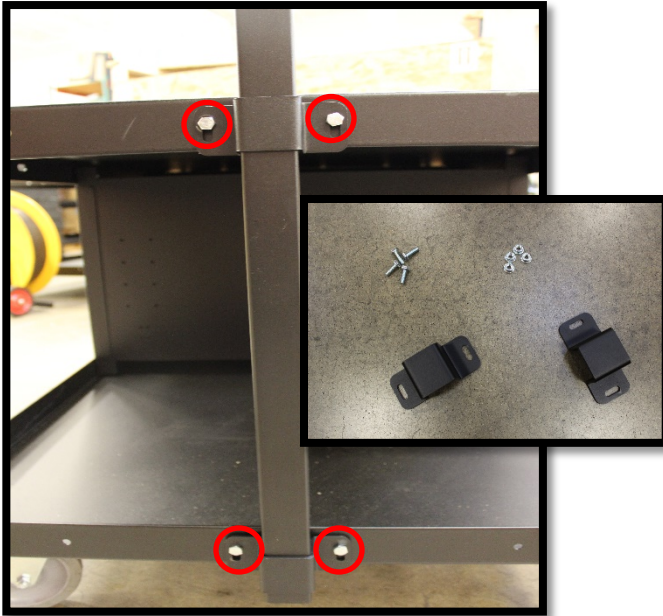

2. Loosen the indicated handle until the swivel arm fits into the cart mount arm. Tighten the handle to secure the swivel arm in place.



3. Screw the ram mount into the bottom of the laptop tray if it hasn't been attached already.



4. Attach the laptop tray to the swivel arm by loosening the indicated T-handle. Insert the tray and adjust it to the desired position.



5. Adjust the arms until you are satisfied with the position. Make sure all handles are securely tightened before putting a laptop in place.

ADJUSTING THE ARMS

